

Current Monitoring CB (E Relay

 
Wide operating voltage Double insulation level

Adjustable protection delay and reset delay External transformer can be connected to expand the scope of use

17.5 mm/36mm width DIN rail mounting Suitable for monitoring the running current of various equipment

YX84**** current mode selection

MODEL & EXPLANATION!



YX8413*** YX831**** YX821****

 
A&B Series

- 1 Power Indicator
- ② Work Indicator
- 3 Current range selection
- 4 Power on delay setting
- ⑤ Protection delay setting
- Over current/under current mode selection


C Series

- 1) Power Indicator
- ② Work Indicator
- 3 Current range selection ④ Protection delay setting
- (5) Reset delay setting
- 6 Over current/under current mode selection

Over Current



Under Current

 

Precautions for use:

When the product is powered on, the power-on delay PT is executed first, and the power light flashes slowly. At this time, the current is not monitored, and the starting the delay is completed, it will enter the normal monitoring mode.

As for YX84****, when using the over/under current function selection knob, please note that: When the power light is flashing quickly, the adjusting knob is not under the normal function area. Only when the power light is always on, it is in the correct position.




always on






flashing quickly

Built-in Transformer A Series Connection Built-in Transformer B Series Connection

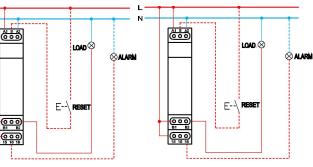

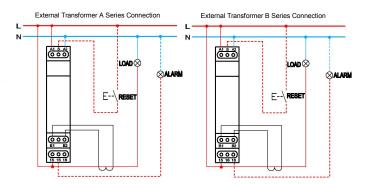

DIMENSIONS INCHES(MILLIMETERS)

